



## Spinstir 10-12

### Product Data Sheet



THE SPINSTIR™ stock solution stirrer is a highly efficient and easy-to-use stirrer for use with all types of product held in a stock solution.


HOLDING STOCK SOLUTIONS containing particles in suspension can be problematic. In a highly concentrated form, many powder products are not able to be dissolved. In this situation, there is a possibility that the particles will settle out during dosing leaving a residue remaining in the stock container after the dosing period has ended. This can be a costly waste of product, and lead to inaccurate dosing.

THE SPINSTIR™ stock stirrer applies sufficient agitation to keep particles in suspension right through the dosing period. All active ingredients are therefore dosed accurately with no product residue remaining at the end of the dosing period.

THERE ARE MANY USES for the Spinstir™. Amongst these are:

- Nutritional powders
- Medicinal powders
- Vaccines
- Horticultural products

BEING NON-INVASIVE in nature, the Spinstir™ system maintains a high level of cleanliness during dosing. Cleaning after dosing is a simple procedure.

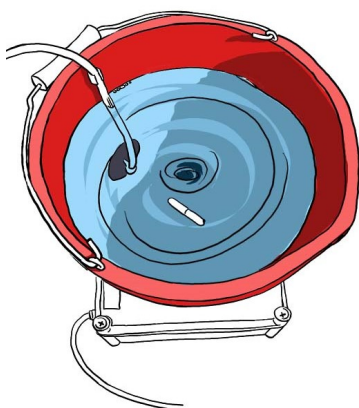

For a video demonstration – go to [www.dosingsolutions.com](http://www.dosingsolutions.com)



IN USE, a flat-bottomed (plastic) stock container is placed on the stirrer enclosure. The required amount of water (see chart below) is placed in the stock container along with the Teflon-coated magnetic follower. When the electrical power is switched on, agitation commences and a small vortex formed. Powder product added to the water will be kept in suspension during dosing.

Type:	Motor Volts.:	Supply:	Item:	Stir (max):
10-12	12 DC	Mains power supply	212CA00	100L
10-12	12 DC	Battery clips	212CA50	100L
15-12	12 DC	Mains power supply	213CA00	200L
15-12	12 DC	Battery clips	213CA50	200L

**SAFETY**  
Follow all safety warnings on product label

26.05.22